

Preliminary Cockpit Preparation

Battery	OFF
Generator Switches.....	OFF
Invertor	OFF
Fuel Tank Switches.....	OFF
Throttles.....	IDLE
Prop Levers	EMERG STOP
Gearing Switches.....	GND
Crank Switches.....	STOP
Flap Lever.....	0 Degrees
Gear Lever.....	DOWN
Parking Brake	SET

Engine Start

Battery	ON
Parking Brake	ON
Beacon Light.....	BEACON
Left Prop Lever	TAXI
Left Throttle Lever	START
Left Gearing Switch.....	GND
ENG1 Fuel Enrichment Switch	PRESS
ENG1 Crank Switch	CRANK
ENG1 Starter Switch	PRESS
Monitor Oil Pressure.....	>40psi
LH Main Fuel Tank switch	ON
Fuel Flow	Monitor
RPM	Monitor
Prop Rotation	Check
LH Generator	ON
Invertor	ON
Right Prop Lever	TAXI
Right Throttle Lever	START
Right Gearing Switch.....	GND
ENG2 Fuel Enrichment Switch	PRESS
ENG2 Crank Switch	CRANK

ENG2 Starter Switch PRESS

Engine Start (continued)

Monitor Oil Pressure	>40psi
RH Main Fuel Tank switch	ON
Fuel Flow	Monitor
RPM	Monitor
Prop Rotation	Check
RH Generator	ON

After Engine Start

Monitor Oil Pressures	Green Arc
Monitor Oil Temperatures	Green Arc
Monitor Fuel Flows	Check
Monitor EGTs	Green Arc
ENG1 Crank Switch	Check RUN
ENG2 Crank Switch	Check RUN
Gearing Switches	SAFE

Taxi

Beacon Light.....	BEACON/TAXI
Lights	As Required
Prop Levers.....	TAXI
Toe Brakes.....	HOLD
Parking Brake	RELEASE
Throttle Levers	BACK
Taxi	SLOWLY
Use Rudder to Steer	SLOWLY

Take Off

Strobe Light	ON
Nav Lights	ON
Landing Lights.....	ON
De-ice Switches	As Required
Set Trim	2 Degrees Nose Up

Flaps 20 Degrees

Prop Levers TAKE OFF

Take Off (Continued)

Parking Brake RELEASE

Throttle Levers TAKE OFF

Rotate Speed (depending on weight) 115 KIAS

Climb

Gear Lever UP

Flaps Lever UP

Landing Lights OFF

Best Climb Speed 150 KIAS

Trim As Required

Cruise

Prop Levers Above CRUISE Line

Throttle Levers As Required

Maintain Torque Press 45-50 PSI

Landing

Landing Lights ON

Beacon Light BEACON/TAXI

Prop Levers TAKE OFF

Flaps Lever 40 Degrees

Throttle Levers As Required

Gear Lever DOWN

Maintain Speed 150 KIAS

Trim 4 Degrees Nose Up

Touchdown Speed 125 KIAS

Reverse Thrust As Required

After Landing and Taxi In

Landing Lights OFF

Beacon Light BEACON/TAXI

Strobe Light OFF

Flaps Lever 0 Degrees

After Landing and Taxi In (Continued)

Prop Levers TAXI

Throttle Levers As Required

Taxi SLOWLY

Use Rudder to Steer SLOWLY

Parking

Parking Brake SET

Beacon Light BEACON

Prop Levers TAKE OFF

Throttle Levers START

Fuel Tank Switches OFF

Crank Switches STOP

Gearing Switches SAFE

Lights OFF

Invertor OFF

Generator Switches OFF

Battery OFF