

## Preliminary Cockpit Preparation

Freight Door .....	CHECK
Rear And Flight Deck Entrance Doors .....	SECURED
Parking Brake .....	ON
Control Lock .....	UNLOCKED
Port L.P. Fuel Cock .....	PORT TANK
Starboard L.P. Fuel Cock .....	STBD TANK
Balance Cock .....	OFF
Feather Handles .....	FULLY IN
External And Internal Lights .....	AS REQD
Cabin Signs .....	ON
Engine Starting Mode Switch .....	NORMAL
Engine Master Start Switches .....	STOP
Ignition And Fuel Switch .....	NORMAL
Internal Start Power Switch .....	24V – NORMAL
Electrical Master Switch .....	FLIGHT – INTERNAL
Weather Radar .....	CHECK
Main Battery Switches .....	ON
Generator Switches .....	OFF
Busbar Voltage .....	24V
Ammeters .....	ZERO
Inverter Control Switches .....	NORMAL – TRANSFER
Electrical Master Switch .....	FLIGHT – INTERNAL
Main Battery Switch (Port) .....	OFF
Attitude Gyro .....	RUNNING – NO FLAG
Main Battery Switch (Port) .....	ON
Electrical Master Switch .....	INTERNAL
All Heating Selectors .....	OFF
Engine Air Bleed Switches .....	CHECK
Pitot Heater Switches .....	CHECK
Airframe De-Icing Pump Switch .....	OFF
Engine Intake Anti-Icing Switches .....	OFF
Propeller Anti-Icing Switch .....	OFF
Windscreens Wiper Switch .....	OFF
HYD Master Switch .....	ON
Main Pressure Gauge .....	CHECK
Emergency Pressure Gauge .....	CHECK

Brake Gauges .....	CHECK
Override Cut-Out Switch .....	CHECK
Fuel Contents .....	CHECK
Booster Pump Switches .....	OFF
Windscreens De-Icing Control .....	IN AND LOCKED
Instruments .....	CHECK
Central Warning Panel (CWP) and Fire Warning Light .....	TEST
O.A.T Gauge .....	CHECK
Low Oil Pressure Caption (CWP) .....	ILLUMINATED
RPM Levers .....	TAXI
Power Levers .....	½ INCH FORWARD
Flaps .....	AS REQD
Emergency Hydraulics .....	NORMAL
Autopilot .....	OFF
Aileron And Rudder Trims Elevator Trim .....	ADJUST

## Engine Start

Door Open Caption (CWP) .....	EXTINGUISHED
Busbar Voltage .....	CHECK
Booster Pump .....	ON
Engine Starting Mode Switch .....	NORMAL START
Internal Start Power Switch .....	AS REQD
Engine 1 Master Start Switch .....	START
NTS Caption (CWP) .....	EXTINGUISHED
Fuel Flow Indicator .....	10%
Start Fuel Regulator .....	PRESS
Ignition - Light Up .....	CHECK
NTS Caption (CWP) .....	ON
Engine 1 Master Start Switch .....	RUN
E.G.T .....	MONITOR
R.P.M .....	MONITOR
Oil Pressure .....	CHECK
Engine 2 Master Start Switch .....	ON
NTS Caption (CWP) .....	EXTINGUISHED
Fuel Flow Indicator .....	10%
Start Fuel Regulator .....	PRESS
Ignition - Light Up .....	CHECK

NTS Caption (CWP).....	ON
Engine 2 Master Start Switch.....	RUN
E.G.T .....	MONITOR
R.P.M.....	MONITOR
Oil Pressure.....	CHECK

### After Engine Start

Internal Start Power Switch .....	24V NORMAL
Engine Starting Mode Switch.....	NORMAL
Electrical Master Switch.....	FLIGHT
External Supply .....	REMOVE
Power Levers .....	ADVANCE TO 80% RPM
Generator Switches .....	ON
Voltmeters .....	27.5V
Ammeters .....	CHARGING
Flaps .....	AS REQD
Booster Pumps .....	ON
Central Warning Panel (CWP) .....	CHECK

### Taxi and Line Up

Taxi Clearance .....	OBTAIN
R.P.M. Levers .....	TAXI
Brake Pedals.....	PRESS AND CHECK PRESSURES
Parking Brake .....	OFF
Nosewheel Steering .....	USE FOR STEERING
Flight Instruments .....	CHECK FREE AND CORRECT MOVEMENT

### Line Up Actions

Trims .....	TAKE-OFF
Fuel .....	CHECK
Flaps .....	AS REQD
Flight Instruments.....	CHECK INSTRUMENTS SET AND SYNCHRONIZED
Ammeters .....	BELOW 100A
Line-up or Takeoff Clearance .....	OBTAIN
Navigation Lights .....	ON
Transponder Mode .....	TA/RA

### Take Off

Cabin Signs .....	ON
Landing Lights .....	ON
Anti-Icing .....	AS REQD
Pitot Heaters .....	AS REQD
Takeoff Clearance .....	OBTAIN
R.P.M. Levers .....	TAKE-OFF
Engine Instruments .....	NORMAL
Power Levers .....	MAXIMUM TAKE OFF POWER (97%)
Rotate.....	MINIMUM 65 KNOTS / 90 KNOTS DEPENDING ON WEIGHT

### Climb

Flaps .....	UP
Nose Wheel Steering.....	STRAIGHT
Cabin Signs .....	AS REQD

### Cruise

Engine Parameters .....	CHECK
Fuel .....	CHECK

### Descent Preparation

Engines .....	CHECK EGT AND TORQUE FOR MAXIMUM TAKE OFF POWER
Fuel.....	CHECK CONTENT AND USE COCKS AND PUMPS AS REQUIRED
Wheel Brakes .....	CHECK PRESSURES
Flaps .....	AS REQD
Cabin Signs .....	AS REQD

### Landing

Landing Lights.....	ON
Flaps .....	AS REQD
R.P.M. Levers.....	TAKE-OFF
Engine Air Bleed Switches .....	ON
Nose Wheel Steering.....	AS REQD

## Parking

Engines..... OPERATE FOR 3 MINUTES AT TAXI CONDITIONS  
Parking Brake ..... SET  
Booster Pumps ..... OFF  
Hydraulic Master Switch ..... OFF  
Engine Master Start Switches ..... STOP  
Power Levers..... FULL REVERSE  
Inverter Control Switches ..... OFF  
Electrical Master Switch..... OFF  
Generators And Batteries ..... OFF  
Avionics Equipment ..... OFF  
Heating And Ventilation..... OFF  
Low Pressure Fuel Cocks ..... OFF  
External And Internal Lights..... AS REQD  
Power Levers..... GROUND IDLE